

# **Contents**

# **S-Mount Lenses**

10+ Megapixel Board Lenses	4
S-Mount to C-Mount Scheimpflug Adapter	4
5 Megapixel Board Lenses	5
3 Megapixel Board Lenses	6
1-2 Megapixel Board Lenses	7
VGA & High Resolution Board Lenses	8
Waterproof Automotive Board Lenses	9
Fisheye Board Lenses	9
Pinhole Board Lenses	0
Time-of-Flight Board Lenses	0

# Accessories

Adapters, Holders, Extension-/Lockrings	11
Optical Formulas	12-13
Optical Glossary	14

# **About Lensation**



# Our mission is to keep our customers excited.

# With this goal in mind, we provide:

- Free consultancy.
- Exceptionally good value for money.
- Best performance.
- OEM design and development.
- Unique solutions.
- Products tailored especially according to your demands.

# S-Mount Lenses (M12x0.5)

# 10+ Megapixel Board Lenses













B14M28620S123C

3C B10M45545

B10M5022S1

B10M542

B10M7224

B14M20020S1

Lensagon No.	lmage format	Focal length	Aperture	M.O.D.	Back focal length	FOV (dia.)	Weight	IR corr.	IR cut Option	Megapixel	Distortion	Lensagon No. with IR cut
B14M28620S123	1/2.3"	2.86	2.0	0.1m	5.71	170°	15.0g		•	14	-25%	B14M28620S123C
B10M45545ND	1/2.3"	4.55	4.5	0.1m	3.44	81.7°	8.2g		•	10	<0.5%	B10M45545NDC
B10M5022S12	1/2"	5.0	2.2	0.3m	8.5	94°	11.0g	•	•	10		B10M5022S12C
B10M5425	1/2.3"	5.4	2.5	0.2m	6.6	70°	6.0g	•	•	10		B10M5425C
B10M7224	1/2.3"	7.2	2.4	0.3m	7.23	57°	12.6g	•	•	10		B10M7224C
B14M20020S123	1/2.3"	20	2.0	0.2m	13.43	21.5°	6.0g		•	14		B14M20020S123C

# S-Mount to C-Mount Scheimpflug Adapter

The tilt mechanism allows overall image sharpness to be controlled in a different way than conventional lenses. Used in conjunction with aperture, the tilt feature of these lenses allows objects or features within an image plane to be kept in focus. This is helpful when imaging objects at oblique angles.

If absolute sharpness in the foreground and background is required, it is necessary to first focus on the closest foreground object and then tilt the lens until the background object is focus. After selecting the correct aperture, both objects will be sharp. Using such tilt mechanisms provides an additional means of controlling depth of field and allows greater freedom over the aperture and shutter speed combinations.

http://www.optowiki.info/glossary/scheimpflug-principle/



Preview CAD image, finalproduct will be available soon

B5M12056

NEW

NEW

NEW

NEW

NEW

B5M16020V2

B5M25024V2

# S-Mount Lenses (M12x0.5)

# **5 Megapixel Board Lenses**



Lensagon No.	lmage format	Focal length	Aperture	M.O.D.	Back focal length	FOV (dia.)	Weight	IR corr.	IR cut Option	Megapixel	Distortion	Lensagon No. with IR cut
B5M2524	1/2.5"	2.5	2.4	0.1m	4.98	166°	6.1g		•	5		B5M2524C
B5M2916	1/2.5"	2.9	2.0	0.1m	4.47	152°	7.2g	•	•	5		B5M2916C
B5M29740ND	1/2.5"	2.97	4.0	0.2m	2.97	102°	3.5g		•	5	< 1%	B5M29740NDC
B5M3618	1/2.5"	3.6	1.8	0.2m	7.25	128°	5.0g		•	5		B5M3618C
BK5M3920	1/2.5"	3.9	2.0	-	6.1	127°	11.0g	•		5		
B5M4018	1/2.5"	4.0	1.8	0.2m	7.72	112°	5.0g		•	5		B5M4018C
B5M4020	1/2.5"	4.0	2.0	0.3m	6.7	114°	5.0g		•	5		B5M4020C
B5M41430ND	1/2.5"	4.14	3.0	0.2m	5.25	82°	8.3g		•	5	< 0.2%	B5M41430NDC
BK5M5020	1/2.5"	5.0	2.0	-	6.2	99°	11.0g	•		5		
B5M6018	1/2.5"	6.0	1.8	0.2m	9.58	75°	6.5g		•	5		B5M6018C
B5M6020	1/2.5"	6.0	2.0	0.3m	7.3	67°	6.0g		•	5		B5M6020C
B5M7630	1/1.8"	7.6	3.0	0.2m	5.38	58°	6.0g		•	5		B5M7630C
BK5M7620	1/2.5"	7.6	2.0	-	6.1	61°	10.5g	•		5		
B5M8018	1/2.5"	8.0	1.8	0.2m	7.8	56°	6.5g		•	5		B5M8018C
B5M8020	1/2.5"	8.0	2.0	0.3m	8.0	50°	5.0g		•	5		B5M8020C
B5M8556S12	1/2"	8.5	5.6	0.1m	5.85	54.3	5.0g		•	5		B5M88556S12C
B5M12020	1/2.5"	12.0	2.0	0.3m	7.6	35°	5.0g	•	•	5		B5M12020C
B5M12028	1/1.8"	12.0	2.8	0.1m	8.57	41°	7.0g		•	5		B5M12028C
B5M12056	1/1.8"	12.0	5.6	0.1m	8.57	41°	7.0g		•	5		B5M12056C
B5M16020V2	1/2"	16.0	2.0	0.3m	7.1	28°	5.0g	•	•	5		B5M16020V2C
B5M25024V2	1/2"	25.0	2.4	0.3m	11.98	18.8°	5.0g	•	•	5		B5M25020V2C

# **3 Megapixel Board Lenses**











BM8018S118NDV2



BM4018S118

B3M12016



B3M16018



BM5518S12ND



BM6020ND



B3M50025

Lensagon No.	lmage format	Focal length	Aperture	M.O.D.	Back focal length	FOV (dia.)	Weight	IR corr.	IR cut Option	Megapixel	Distortion	Lensagon No. with IR cut
B3M21835ND	1/4"	2.18	3.5	0.1m	1.30	94°	4.0g		•	3	<0.6%	B3M21835NDC
B3M2818	1/2.5"	2.8	2.2	0.3m	5.8	147°	5.0g	•	•	3		B3M2818C
BM3516ND	1/3"	3.5	1.6	0.2m	5.97	81°	10.0g	•	•	3	< 1.9%	BM3516NDC
BM3518S125ND	1/2.5"	3.5	1.8	0.2m	5.97	90°	12.0g	•	•	3	< 1.9%	BM3518S125NDC
BM3524S12ND	1/2"	3.5	2.4	0.1m	6.09	97°	21.8g	•	•	3	<-3.1%	BM3524S12NDC
B3M3616	1/2.5"	3.6	2.0	0.2m	6.0	120°	6.3g	•	•	3		B3M3616C
B3M4016	1/2.5"	4.0	2.2	0.2m	7.28	112°	5.4g	•	•	3		B3M4016C
BM4018S118	1/1.8"	4.0	1.8	0.2m	8.0	126°	10.0g	•	•	3		BM4018S118C
BM4518S125ND	1/2.5"	4.5	1.8	0.2m	6.14	76.4°	13.0g	•	•	3	< 1.9%	BM4518S125NDC
BM5518S12ND	1/1.8"	5.5	1.8	0.2m	6.87	76°	10.0g	•		2	< 1.9%	BM5518S12NDC
BM6020ND	1/3"	6.0	2.0	0.2m	6.27	57°	5.9g	•	•	3	<-2.6%	BM6020C
B3M6016	1/2.5"	6.0	2.2	0.3m	6.8	72°	5.8g	•	•	3		B3M6016C
B3M6020S12	1/2"	6.0	2.0	0.5m	8.3	81°	9.9g			3		
B3M8016	1/2.5"	8.0	2.2	0.4m	8.0	54°	5.0g	•	•	3		B3M8016C
B3M8018S12	1/2"	8.0	1.8	0.5m	7.9	57.7°	10.7g			3		
BM8018S118NDV2	1/1.8"	7.8	1.8	0.1m	7.1	57°	36.1g	•	•	3	- 2.0%	BM8018S118NDV2C
B3M12016	1/2.5"	12.0	2.3	0.3m	6.44	35°	5.0g	•	•	3		B3M12016C
B3M16018	1/2"	16.0	1.8	0.35m	7.21	27.8°	6.5g	•	•	3		B3M16018C
B3M25024	1/2"	25.0	2.4	0.4m	10.26	18°	7.1g	•	•	3		B3M25024C
B3M35025	1/2"	35.0	2.5	0.4m	14.49	13.1°	15.5g	•	•	3		B3M35025C
B3M50025	1/2"	50.0	2.5	0.5m	18.38	9.3°	34.5g	•	•	3		B3M50025C

# 1-2 Megapixel Board Lenses



BM2118V2

BM2420



BM2820













BM4518S118ND-810 BM4525S118ND



























BM10028S12

B2M10030N2

BSM12016S12

BM16018

					D 1 ( 1				ID .			
Lensagon No.	lmage format	Focal length	Aperture	M.O.D.	Back focal length	FOV (dia.)	Weight	IR corr.	IR cut Option	Megapixel	Distortion	Lensagon No. with IR cut
BM2118V2	1/3"	2.1	2.2	0.2m	6.3	170°	6.5g	•	•	1		BM2118V2C
BM2420	1/3"	2.4	2.0	0.15m	4.56	132°	6.0g	•	•	1		BM2420C
BM2820	1/3"	2.8	2.0	0.2m	5.29	122°	6.0g	•	•	1		BM2820C
BM2920S118	1/1.8"	2.95	2.8	0.15m	7.85	178°	13.0g	•	•	1		BM2920S118C
BM3618	1/3"	3.6	1.8	0.2m	6.59	100.2°	6.0g	•	•	1		BM3618C
B2M3814	1/2.5"	3.85	1.4	0.2m	6.76	121.9°	9.0g		•	2		B2M3814C
BM4218	1/3"	4.2	1.8	0.2m	7.21	89°	7.0g	•	•	1		BM4218C
BM4518S118ND-810	1/1.8"	4.5	1.8	0.1m	6.4	90°	14.0g	•		1	<2.8%	
BM4525S118ND	1/1.8"	4.5	2.5	0.1m	6.4	90°	15.0g		•	1	-2.8%	
BM4620DN	1/3"	4.6	2.0	0.2m	5.63	80°	6.0g	•	•	1		BM4620DNC
BM6018	1/3"	6.0	1.8	0.2m	9.33	60°	6.0g	•	•	1		BM6018C
BSM6016S12	1/2"	6.0	1.8	0.2m	8.73	88°	4.5g	•		2		
BM6020S12	1/2"	6.0	2.0	0.2m	10.7	85°	6.0g			1.3		
BM8018	1/3"	8.0	1.8	0.2m	5.4	45°	6.0g	•	•	1		BM8018C
BSM8016S12	1/2"	8.0	1.9	0.2m	5.4	62°	6.0g	•		2		
BM8020S12	1/2"	8.0	2.0	0.2m	8.6	56°	6.0g			1.3		
BM9040	1/3"	9.0	4.0	0.1m	8.0	34.4°	3.9g	•		1.3		
BM9050	1/3"	9.0	5.0	0.1m	8.0	34.4°	3.9g	•		1.3		
BM10028S12	1/2"	10.0	2.8	0.4m	8.0	44°	6.0g			1.2		
B2M10030N2	1/2"	10.3	3.0	0.2m	8.77	41.5°	3.5g		•	2		B2M10030N2C
BM12018	1/3"	12.0	1.8	0.2m	6.54	28.4°	6.0g	•	•	1		BM12018C
BSM12016S12	1/2"	12.0	2.0	0.2m	6.54	38.6°	6.0g	•		2		
BM16018	1/3"	16.0	1.8	0.2m	6.59	21°	6.0g	•	•	1		BM16018C

# **VGA & High Resolution Board Lenses**





Lensagon No.	lmage format	Focal length	Aperture	M.O.D.	Back focal length	FOV (dia.)	Weight	IR corr.	IR cut Option	Megapixel	Lensagon No. with IR cut
BK1220	1/4"	1.2	2.0	0.2m	3.4	192°	5.2g		•		BK1220C
BK1820	1/4"	1.8	2.0	0.2m	3.65	160°	5.5g		•		BK1820C
BT1922	1/4"	1.9	2.2	0.05m	4.7	156°	3.5g		•		BT1922C
BT2120	1/3"	2.1	2.0	0.2m	4.92	151°	6.5g		•		BT2120C
BHR2125	1/3"	2.1	2.5	0.2m	4.25	165.7°	6.1g				
BT2520	1/3"	2.5	2.0	0.2m	5.18	140°	5.3g		•		BT2520C
BHR2525	1/3"	2.5	2.5	0.2m	5.04	142.7°	6.8g				
BT2920	1/3"	2.9	2.0	0.2m	5.02	138°	4.5g		•		BT2920C
BT3020	1/3"	3.0	2.0	0.2m	5.35	124°	3.5g		•		BT3020C
BHR3020	1/3"	3.0	2.0	0.2m	5.67	126.0°	5.9g				
BT3620	1/3"	3.6	2.0	0.2m	5.00	100°	4.1g		•		BT3620C
BK4320	1/3"	4.3	2.0	0.2m	6.1	85°	6.0g		•		BK4320C
BHR4318	1/3"	4.3	1.8	0.2m	6.16	83.1°	4.0g				
BHR5620	1/3"	5.6	2.0	0.2m	8.07	65.3°	4.0g				
BT6020V2	1/3"	6.1	2.0	0.2m	8.03	62°	6.5g		•		BT6020V2C
BT8020N	1/3"	8.0	2.0	0.2m	8.25	44°	3.5g		•		BT8020NC
BHR8020	1/3"	8.0	2.0	0.2m	7.6	43.0°	6.0g				
BT12020	1/3"	12.0	2.0	0.4m	8.97	29°	3.2g		•		BT12020C
BHR12020	1/3"	12.0	2.0	0.2m	6.7	28.0°	4.5g				
BHR16012S12	1/2"	16.0	1.2	0.3m	7.2	21.8°	11.0g				
B16020S12	1/2"	16.0	2.0	0.2m	12.3	27.8°	4.2g				
BT25020S12	1/2" (1/3")	25.0	2.0	0.2m	8.29	18.6° (13.8°)	7.0g		•		BT25020S12C
B25020S12	1/2"	25.0	2.0	0.2m	11.8	18.2°	17.6g				
B35020S12	1/2"	35.0	2.0	0.2m	18.9	13.0°	15.4g				
B50020S12	1/2"	50.0	2.0	0.4m	33.9	9.2°	27.1g				

# S-Mount Lenses (M12x0.5)

# Waterproof Automotive Board Lenses




BA1520WPC



BA1825WPC





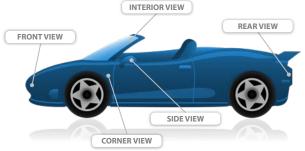

Lensagon No.	lmage format	Focal length	Aperture	M.O.D.	Back focal length	FOV (dia.)	Weight	IR corr.	IR cut Option	Megapixel	Lensagon No. with IR cut
BA1520WPC	1/4"	1.5	2.0	0.2m	2.2	163.0°	5.5g		only	<1	Χ
BA1825WPC	1/4"	1.8	2.5	0.2m	2.2	160.0°	5.5g		only	<1	Х
BA2025WPC	1/4"	2.0	2.5	0.2m	2.47	160.0°	5.5g		only	<1	Х
BA2325WPC	1/3"	2.3	2.5	0.2m	2.7	163.0°	6.0g		only	<1	Х

# Fisheye Board Lenses



















BF13M0922S13C

BF5M11920

BF10M10526S132

BFM1220C

BF5M15828S125

BF5M13720























BF16M220D

BF9M1422

BF10M14522S18

BFM1524S125

BF3M2122S13

BF5M19622

BF10M19828S118

BF2M2020

BF5M2223S129

BF2M2020S23

Lensagon No.	lmage Format	Focal Length	Aperture	M.O.D.	Back Focal Length	Angle of View (D)	lmage Circle	Weight	IR corr.	IR cut option	Mega- pixel	Lensagon No. with IR cut
BF5M12721	1/4"	1.27	2.1	0.1m	4.18	185°	2.8	4.7g	•	•	5	BF5M12721C
BF13M0922S13C	1/3.2"	0.9	2.2	0.1m	2.01	200°	2.9	5.6g		only	13	-
BF5M11920	1/3.2"	1.19	2.0	0.2m	6.44	180°	3.24	14.7g	•	•	5	BF5M11920C
BF10M10526S132	1/3.2"	1.05	2.6	0.1m	3.2	200°	3.5	13.7g	•	•	10	BF10M10526S132C
BFM1220C	1/3"	1.2	2.0	0.2m	2.91	190°	3.84	7.5g		only	1.3	-
BF5M15828S125	1/2.5"	1.58	2.8	0.1m	5.75	180°	4.1	10.9g	•	•	5	BF5M15828S125C
BF5M13720	1/2.5"	1.37	2.0	0.15m	5.57	183°	4.15	20.5g	•	•	5	BF5M13720C
BF16M220D	1/2.3"	1.2	2.5	0.1m	2.95	220°	4.2	14.0g		•	16	BF16M220DC
BF9M1422	1/2.3"	1.41	2.2	0.1m	3.69	183°	4.5	24.0g	•	•	9	BF9M1422C
BF10M14522S18	1/1.8"	1.45	2.2	0.1m	4.62	190°	4.6	14.0g	•	•	10	BF10M14522S18C
BFM1524S125	1/2.5"	1.49	2.4	0.06m	2.94	183°	4.7	4.0g		•	1.3	BFM1524S125C
BF3M2122S13	1/3"	2.1	2.2	0.1m	3.67	184°	4.8	3.9g	•	•	3	BF3M2122S13C
BF5M19622	1/2.5"	1.96	2.2	0.1m	2.77	180°	5.6	2.3g	•		5	-
BF10M19828S118	1/1.8"	1.98	2.8	0.1m	6.32	180°	5.6	15.6g	•	•	10	BF10M19828S118C
BF2M2020	2/3"	2.0	2.0	0.08m	6.17	175°	6.0	18.5g	•		2	BF2M2020C
BF5M2223S129	1/2.9"	2.2	2.3	0.1m	4.71	195°	6.2	4.8g	•	•	5	BF5M2223S129C
BF2M2020S23	2/3"	2.0	2.0	0.08m	6.17	195°	6.54	18.0g	•		2	BF2M2020S23C

NEW

# S-Mount Lenses (M12x0.5)

# **Pinhole Board Lenses**





BP2824S13

BP3M3728S127

Lensagon No.	lmage format	Focal length	Aperture	M.O.D.	Back focal length	FOV (dia.)	Weight	IR corr.	IR cut Option	Megapixel	Lensagon No. with IR cut
BP2824S13	1/3"	2.8	2.4	0.1m	3.1	125°	1.5g		•		BP2824S13C
BPM3725C	1/3"	3.7	2.5	0.2m	3.64	106°	-		only	1	-
BP3M3728S127	1/2.7"	3.7	2.8	0.3m	3.7	108.4°	1.8g		•	3	BP3M3728S127C

# NEW

# **Time-of-Flight Board Lenses**

### **Features**


- Light sensitive lenses with special bandpass filters for Time-of-Flight 3D Cameras
- Suited fine for factory automation, robotics and logistics






BTOF2512-850

BTOF2512-940

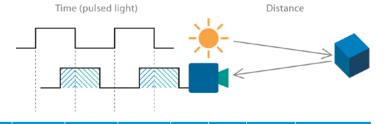

NEW	
NEW	,

Lensagon No.	lmage format	Focal length	Aperture	M.O.D.	Back focal length	FOV (dia.)	Weight	IR corr.	IR cut Option	Optical Distortion	bandpass filter
BT0F2512-850	1/3"	2.5	2.0	0.2m	5.18	140°	-			-53%	850nm
BT0F2512-940	1/3"	2.5	2.0	0.2m	5.18	140°	-			-53%	940nm

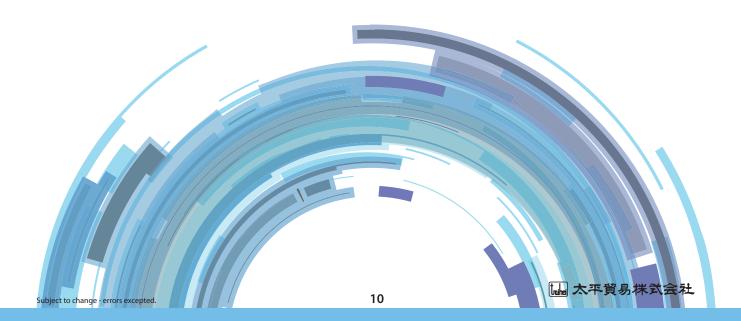

# **Accessories**

# **Accessories**

Lensation offers a wide range of accessories for Board Lenses and C-/CS-Mount lenses. You will find simple extension/lock rings, S-Mount holders and e.g. our self-developed, focussable S- to C-Mount adapter AD05OH(V2).



Example combination of Lock Ring (red) and C-Mount to S-Mount Adapter on a C-Mount smart camera.



# **S-Mount Accessories**



ST05

M12 Extension ring 5mm Material: Aluminium, Height: 5 mm



ST10

M12 Extension ring 10mm Material: Aluminium, Height: 10 mm



M12TM14

### M12 to M14 Adapter

Material: Aluminium. For using M12x0.5 lenses in M14x0.5 mounts





SH01F08V4

# S-mount lens holder 8mm

Material: Plastic, mounting hole distance 22mm, Height: 7.9 mm, Width: 20 mm



SH02M13V3

# S-mount lens holder 13mm

Material: Plastic, mounting hole distance 22mm, Height: 13 mm, Width: 20.3 mm





SH03H16V3

### S-mount lens holder 16mm

Material: Plastic, mounting hole distance 22mm, side hole for lock screw. Inner height 5mm



LRM12V2

# M12 x 0.5 Lock Ring

Material: Aluminium, Black anodized, Height: 2 mm, Diameter: 15.8 mm



FAM12D14H08

# Iris/Filter adapter for M12x0.5

allows to add a filter to standard S-Mount (M12x0.5) Lenses or to modify the F-Number.

# **C-Mount Accessories**

**ADCTS** 



# C-Mount to CS-Mount Adapter

with male and female thread, 5mm effective height, for use of c-mount lenses with cs-mount cameras



CT40

### **Extension Tube 40mm**

Material: Aluminium, Height: 40 mm 40mm extension tube for C-Mount lenses.



AD02F

# S-Mount to C-Mount Adapter Flat

Male c-mount thread and female M12x0.5 thread, for use of s-mount lenses in c-mount cameras.



AD03H

# S-Mount to C-Mount Adapter High

Male c-mount thread and female M12x0.5 thread, for use of s-mount lenses in c-mount cameras.



AD01S

# S-Mount to C-Mount Adapter Standard

Male c-mount thread and female M12x0.5 thread, for use of s-mount lenses in c-mount cameras.



AD04M

# S-Mount to C-Mount Adapter Medium

Male c-mount thread and female M12x0.5 thread, H: 6mm, for s-mount lenses in c-mount cameras.



AD05OH V2

### Focussable s-mount to c-mount adapter

Adapter with a male c-mount thread and a 12mm hole for M12x0.5 (s-mount) lenses.



LRICM

# **C-Mount Lock Ring Inside Thread**

Material: Aluminium, Black anodized, Height: 2 mm, Outside diameter: 31mm



LROCM

# C-Mount Lock Ring Outside Thread

Material: Aluminium, Black anodized, Height: 2.5 mm, Inside diameter: 20mm

# **Optical Formulas**

# How to calculate optical magnification

Most of Lensagon lens series are designed at finite distance. Optical magnification is the image size (CCD) ratio against the object size (FOV) and the most important for selection of a lens.

# Sensor size

Area Sensor

Examples of area sensor used for machine vision.

It is expected that various sensors will be available for next generation.

Image Size inch	1/4	1/3	1/2	1/1.8	2/3	1	1.1
Vertical mm	2.7	3.6	4.8	5.35	6.6	9.6	12
Horizontal mm	3.6	4.8	6.4	7.14	8.8	12.8	12
Diagonal mm	4.5	6	8	8.93	11	16	17

Line Sensor

Length of line sensor is formed, depended on pixel size and resolution. As the line sensor is larger, the dimension of a lens becomes larger. Design and manufacture of lenses for the large line sensors are required for high specification.

Image Size mm	10.24	14.34	20.48	28.67	28.67	35	36	57.34	61.44	
Pixel size µm	10	14	10	14	7	4.7	7	7	5	
Resolution pixel	1024	1024	2048	2048	4096	7450	5150	8192	12288	

# Formula of optical magnification


FOV

Field of view (FOV) The actual size of a viewed object that can be taken when the lens is attached to the camera. Ex. Optical magnification: 0.5x Sensor: 1/2"

Vertical FOV 4.8 ÷ 0.5 9.6mm Horizontal FOV 6.4 ÷ 0.5 12.8mm

Magnification

Optical magnification (M) = Sensor size/FOV

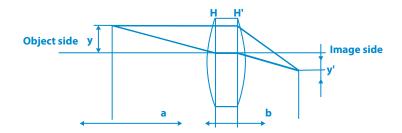

# **Electronic magnification and monitor magnification**

Electronic magnification

Magnification of an image on a sensor when it is displayed on a monitor screen.

Monitor magnification

Magnification of an object displayed on a monitor screen through a lens.

Ex. Optical magnification: 0.5x Sensor: 1/2 Monitor size: 15 inch (1 inch = 25.4mm)

Electronic magnification 15 x 25.4 ÷ 8 47.6x


Monitor magnification 0.5 x 47.65 23.8x

# How to calculate focal length and photographic range

# Formula of photographic range

Distance from lens to object  $\times$  Image size X =Focal length


Ex. Object distance: 100mm Focal length: 50mm CCD: 2/3




### Formula of Focal length

Distance from lens to object  $\times$  Image size Height

Ex. Object distance: 20m Height: 6.6m CCD: 2/3



# Formula of conjugation relationship

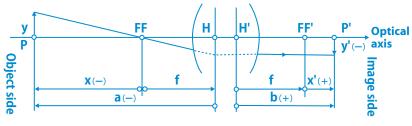

- Basics formula
- $-\frac{1}{a} + \frac{1}{b} = \frac{1}{f} \qquad M = \frac{y'}{y} = \frac{b}{a}$
- Horizontal magnification
- - Image point distance  $b = (1 - M) \times f$
- Object point distance  $-a = (1 - \frac{1}{M}) \times f$

- f: Focal length
- FF: Front side focal point
- FF': Rear side focal point
- H: Front side principal point
- H': Rear side principal point
- P: Object point
- P': Image point
- a : Distance from front side point to object point
- **b**: Distance from rear side principal point to image point
- x : Distance from front side focal point to object point
- x': Distance from rear side focal point to image side point
- M: Magnification

- Relationship of object side NA and image side NA (NA  $\dot{}$ ) NA' =  $\frac{NA}{M}$
- Relationship of F No. and Effective F no.(Ef) Fe= (1-M) F
- Relationship of NA and NA'= $\frac{1}{2Fe}$  NA'= $\frac{1}{2(1-M)F}$ Effective F No.


$$NA = \frac{M}{2Fe}$$
  $NA = \frac{M}{2(1-M)F}$ 

# Camera mount and flange back

Distance from the vertex of the last lens to the back focal point.

Flange back

Distance from the camera's lens mount reference surface to the focal plane.



Name	Flange back	Screw size	
C Mount	17.526mm	25.4mm 32tpi thread	
CS Mount	12.5mm	25.4mm 32tpi thread	
F Mount	46.5mm	Bayonet	
K Mount	45.5mm	Bayonet	

# **Optical Glossary**

# Resolution(µm)

Resolution is a measure of how closely spaced two points may be before they cannot be distinguished. For example, 1µm resolution means that two points that are 1µm away from each other can be distinguished. Resolution values in this catalog are lenses' theoretical resolutions. The following is a formula to calculate theoretical resolution based on an aplanatic lens's ray diffraction. (Rayleigh formula) Wavelength 0.61× NA

# Resolving power(line/mm)

Resolving power indicates the number of black and white lines distinguished within 1mm in an image through a black and white grid-like chart lens. It is expressed by line/mm.


For example, 100 line/mm means that black and white pitch 1/100mm( $10\mu$ ) can be distinguished. The width of both the black and white lines is 1/200mm(5u).

# **Horizontal TV resolution**

The total number of black and white horizontal stripes on a TV monitor screen. It is expressed in TV

For example, 200TV lines of horizontal TV resolution means that 100 white horizontal lines is counted as one line. However, for TV lines, one pair is counted as 2 TV lines. For example, if a 1/2-inch CCD camera is used with a lens of 50 lines/mm resolving power, horizontal TV resolution on a TV monitor screen is calculated as follows; 50×6.4(CCD width)×2=640TV

# **Distortion**

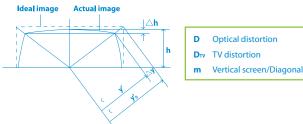

### **Optical distortion**

Lens's aberration where a straight object outside of the optical axis appears curved.

$$\frac{y'-y'_0}{y'_0} \times 100\%$$

Positive distortion of a straight line is called pincushion distortion. Negative distortion is called barrel distortion.

Image distortion on a TV monitor. The closer to zero, the better the performance.

$$D_{TV} = \frac{\triangle h}{2h} \times 100\%$$
  $D_{TV} = \frac{1}{2} (1 - m^2) D$  m=0.6  $D_{TV} = 0.32D$ 

Object	Pincushion distortion	Barrel distortion

### Aperture efficiency / Marginal light quantity (%)

Aperture efficiency indicates the brightness difference between the optical axis of the image formation plane and its surrounding area when an evenly bright object is captured with a lens. It is expressed by percent(%) assuming that the center brightness is 100. It is one of a lens's optical characteristics

### Shading

Shading is the brightness difference between TV monitor's center and its edges when an evenly bright object is captured with a lens and CCD-TV camera. Shading indicates comprehensive performance of a lens and TV camera.

# **Chromatic aberration**

In lenses' optional systems, positions where images are formed and image magnification differ according to light's wavelength. Rays with different wavelengths have different colors. This is called chromatic aberration. Aberration on the optical axis is called chromatic aberration on the axis and magnification difference is called magnification chromatic aberration

# F Number (F No)

The value indicates a lens's brightness. It is calculated by dividing the lens's focal length by the lens's effective diameter(entrance pupil D mm) looking from object side. It can be also calculated by NA and lens's optical magnification(). The smaller the number, the brighter the lens is, F No = f/D

# **Effective F No**

The value indicates a lens's brightness. It is calculated by dividing the lens's focal length by the lens's effective diameter(entrance pupil D mm) looking from object side. It can be also calculated by NA and Lens's optical magnification(). The smaller the number, the brighter the lens is. Effective F No = (1+M) x F No

# Numerical aperture

The higher the NA, the greater the resolution and brightness are.

When the half angle that an image makes on exit pupil is u' and refractive index is n', n' xsin u' is called image side numberical aperture, NA'.

NAs in this catalog indicate object side numerical apertures.



NA=M/2xF, NA'=1/2xF.
Relation of NA and NA' is NA=NA' x Optical magnification or NA'=NA/optical magnficiattion.

# MTF

It provides a graph analyzing a lens' ability to resolve sharp details in very fine sets of parallel lines, and a lens' contrast or ability to provide a sharp transfer between light and dark areas in sets of thicker parallel lines.

# Depth of field

Images through lenses theoretically form as points. Acceptable blur on an acceptably clear image is called the permissible circle of confusion.

Depth is the distance between the nearest and farthest points that appear in acceptably sharp focus when an object is shifted back and force from the best focal point. Depth range of the object side is called depth of field.

Depth of field = 2(Permissible circle of confusion x Effective F No/Magnification<sup>2</sup>)

# **Depth of focus**

Depth is the distance between the nearest and farthest points that appear in acceptably sharp forcus when a CCD is shifted back and force from the best focal point. Depth range of the image side is called depth of focus.

### Angle of view

The angle formed by imaginary lines connecting the lens second principal point with both ends of the image diagonal. Angle of view is directly associated with lens focal length. As the focal length is longer, the angle of view is narrower.

Angle of view 2x tan 1D Image size 2f Focal length

Distance from the front end of a lens system to the object under inspection.

Distance from the object to the image sensor.

### Focal length

Focal length is the distance from the optical system's principle point to the focal point. Distance from the vertex of the last lens to the back focal point is called back length. Distance from the vertex of the first lens to the front focal point is called front focal length.

### Image size

The diameter of the sharp image circle formed by a lens. Area sensor is expressed by inch, and diameter of image circle is equal to diagonal of sensor. Image circle of diameter for line sensor is equal to the maximum sensor size. It is expressed by pixel size x resolution.

# Memo





# LL 太平貿易株式会社

TAIHEI BOEKI CO., LTD.

# 開発営業課

〒103-0023 東京都中央区日本橋本町2-2-2 TEL 03-3270-4826 FAX 03-3245-1767 http://www.taiheiboeki.co.jp tokyo@taiheiboeki.co.jp